



DreamX


Electric Swing
User Guide

Maximum weight of the child 9kg

EN 16232:2013+A2:2023

 For any queries, contact hello@amanababy.com



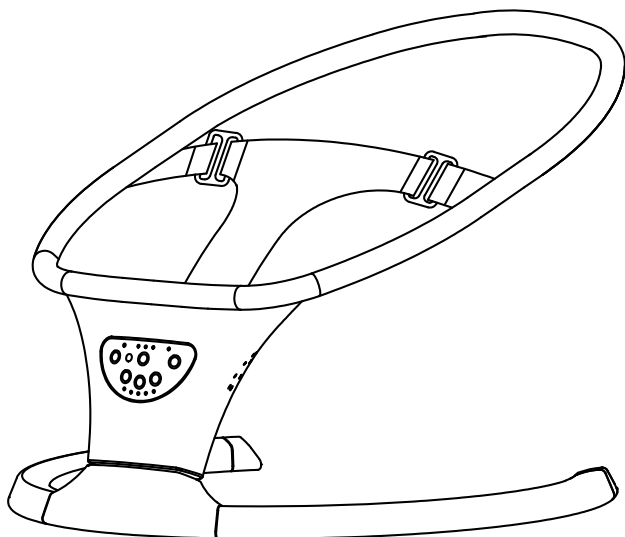

User Guide

DreamX Electric Swing



IMPORTANT!

**Read carefully and keep
for future reference.**

Welcome to Amana, where we craft each item with meticulous care to ensure your utmost trust and confidence in our products for your new arrival!

We sincerely hope that you find joy in using your DreamX Electric Swing.

We kindly request you to attentively read and adhere to the provided instructions to ensure the safety and security of your little one.

Congratulations, and we extend our warmest wishes to you and your baby for the very best journey ahead.

 
Contents

- Product Components.....4
- Assembly Details5
- Instructions for Use of the Safety Harness6
- Product Power Supply6
- Instructions for Use.....7
- Remote Control Instructions9
- Product Specification.....10
- Cleaning & Maintenance11
- Warnings11
- Warranty 13

Product Components


Please check the quantity of the contents before use, if there are missing pieces, please contact the retailer or manufacturer.

1. Fabric Cover and Insert x 1
2. Upper Seat Frame x 1
3. Lower Seat Frame x 2
4. Control Unit x 1
5. Legs (Left & Right) x 1 each
6. Connector Base x 1

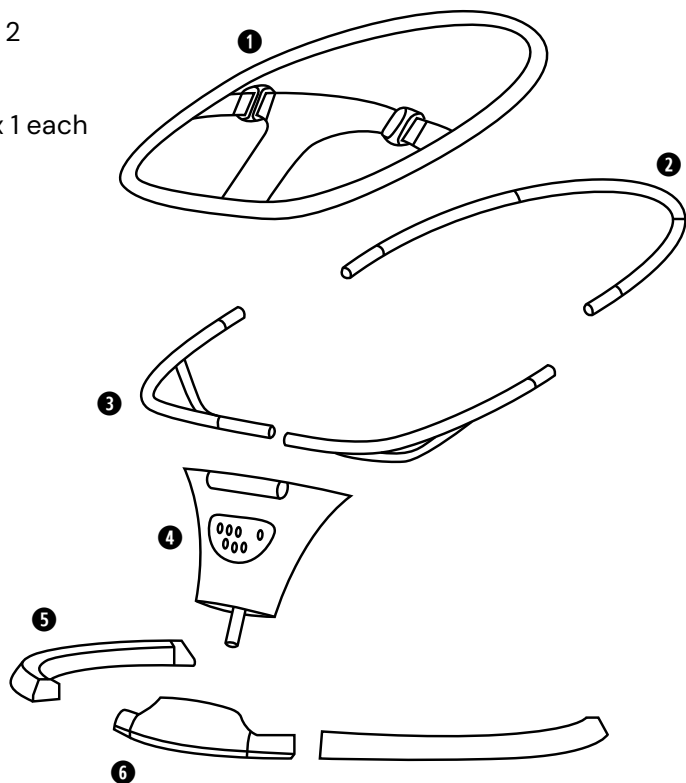

Assembly Details

 
1. Fit each of the two legs (left and right) into the base and lock them in place with the screws and hex key provided.
2. Fit in the Control Unit into the Connector Base.
3. Push the front left and right Lower Seat Frame into the Control Unit and ensure it clicks in securely.
4. Push the Upper Seat Frame into the Lower Seat Frame and ensure it click in securely.
5. Pull the Fabric Cover over the top and stick the Velcro on the reverse side of the cloth cover.
6. Add the newborn insert. It is now ready to use.

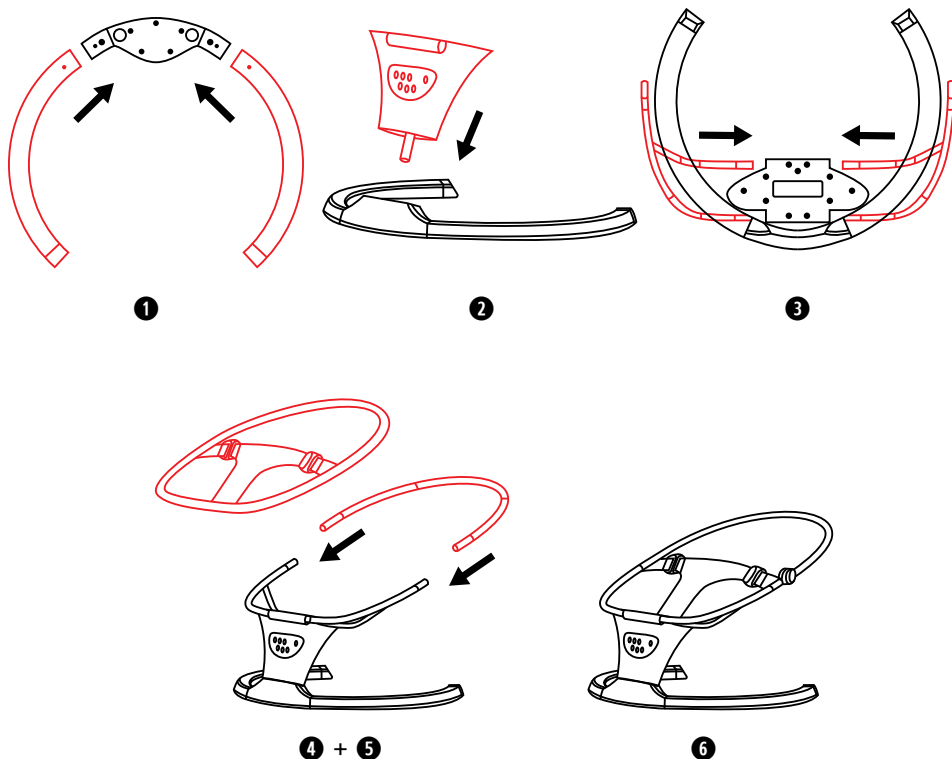

Instructions for Use of the Safety Harness

As shown in the picture (a) Locked: Insert the four sides of the plug into the safety seat, that is locked. Open: Press the middle circle, the plug pops outwards to open.

 
As shown in the picture (b) Belt Adjustment: Pull the buckle outward to shorten: Shoulder Strap Adjustment: Pull the tail strap downward to shorten, and loosen the tail strap upward to adjust the length.

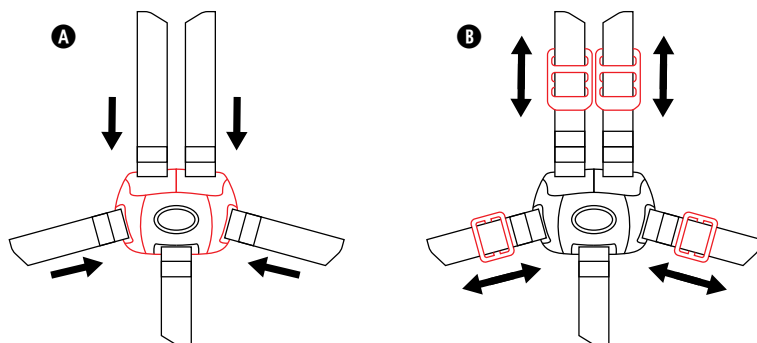

Product Power Supply


Adaptive Power Supply.

 The adaptor plug can be inserted into 100–240V AC power supply, 50/60Hz 0.6A.
50/60Hz 0.6A AC power supply, DC interface can be connected to the charging treasure power supply; adaptor output voltage is 6V, current $\leq 1000\text{mA}$.

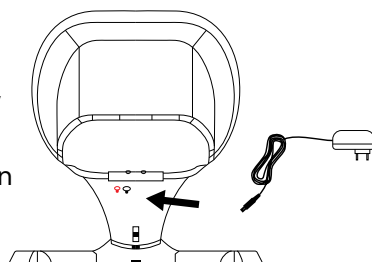


Battery Power Supply Battery Installation Instructions.

 1. Open the battery box cover.
2. Load the battery into the battery compartment according to the positive and negative instructions.
3. Close the battery compartment cover.

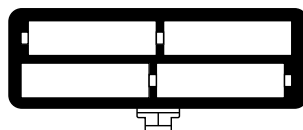

4X 1.5V SIZE AA/LR6

 
Instructions for Use

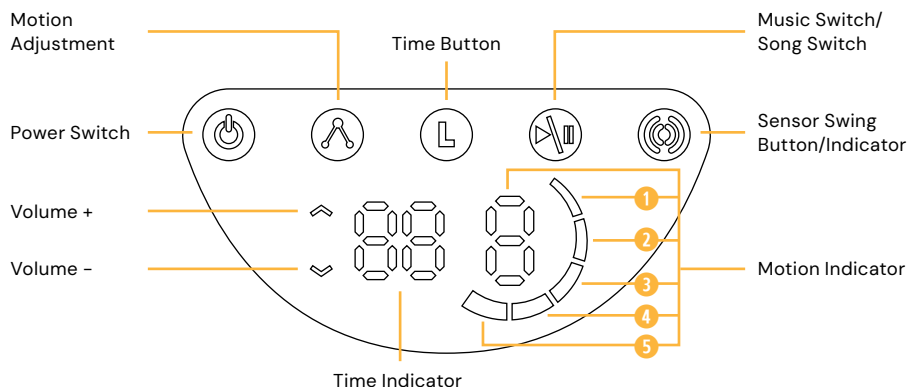


1. **Power On/Off** — Press the power switch once to turn it on and the display shows the number 0, this is now switched on; press again to switch it off.
2. **Motion button** — 5 adjustment speeds
Note: When the motion is in neutral and there is no timing, the motion indicator and timing light will flash; when jamming is detected, the motion will be stop automatically and the motion indicator will flash as a reminder.
3. **Timer** — 3 choices of setting: 8 minutes, 15 minutes or 30 minutes. The timing display will be counted down according to the time remaining in the timer and will enter standby mode when completed.
4. **Music playback/volume button**, press to play system music to start; short press to play the next music; volume +/- button to adjust the volume; long press for about 3 seconds to close the music.
5. **Sensor rocking button**, press the indicator light on, open the intelligent sensor system, when the baby falls asleep it will stop rocking, once the baby wakes up it will detect it and it will automatically start rocking.
6. **Bluetooth Speaker** — Switch the crib on and turn on the Bluetooth function of your device and search for the signal to pair **PT-BABY**; you can also adjust the volume of the rocking bed through the device used to pair.

Option to lock the function of swing.

 As shown in the picture below, the latch can be switched between swing and stationary with by pushing the lock up or down

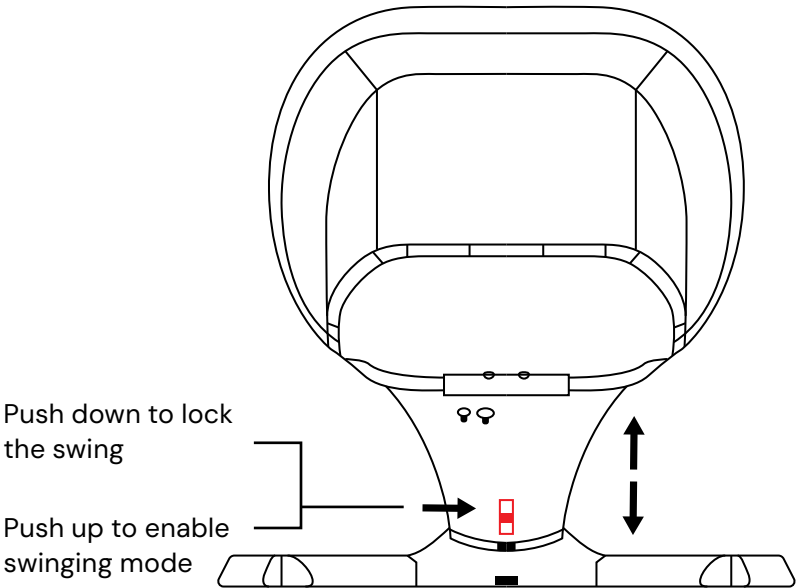

Remote Control Instructions

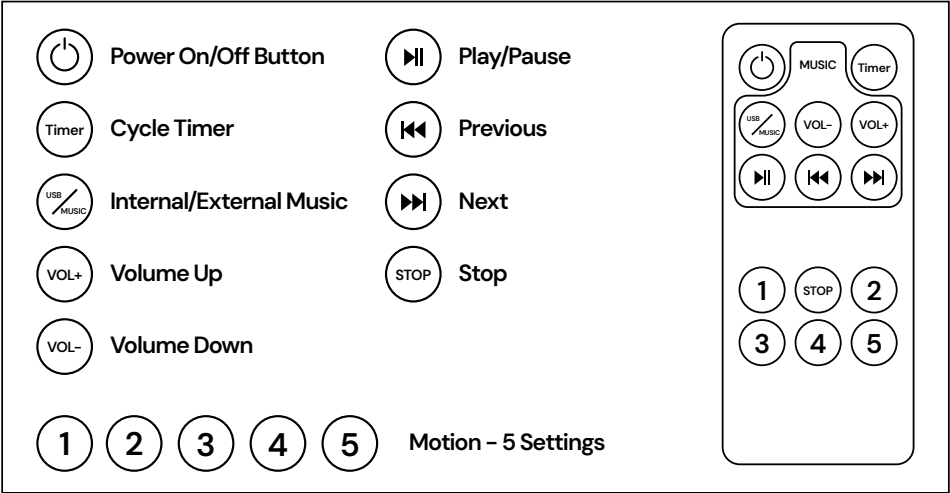 

Button cell batteries are included in the remote control.
Remove the insulating plastic sheet before switching on the power.

Troubleshooting

Issue	Resolution
Music and swinging, then suddenly stops.	It may be that the battery has not been installed properly or the power is not enough.
No function at startup	Check the batteries are inserted correctly.
If not used for a long time.	Disconnect the battery.
Severe shaking.	Please check whether the closing joint is open or not.
Indicator light becomes weak.	Possibly low battery.

Product Specification

Product Name	DreamX Electric Swing
Model	AM45-PD-B071
Input Voltage	110-240V/50-60Hz 0.6A
Output Voltage	5-6V ≤ 1000 MA
Applicable Age	0+ years until baby reaches 9kg
Standard	EN 16232:2013+A2:2023
Date of Manufacture	Labelled on the packaging or on the product body
WARNING	Prohibit the use of adapters older than this product

Cleaning & Maintenance

- Seat fabric and insert: Machine wash in cold water on a slow setting or hand wash.
- Use a damp cloth with flexible soap to scrub and dry, please do not soak in water to wash.
- Filling: **WARNING!** Bleaching, dehydrating and drying are prohibited.

Warnings

-  **WARNING:** This product should only be assembled and cleaned by an adult.
-  **WARNING:** To avoid injury ensure that children are kept away when unfolding and folding this product.
-  **WARNING:** Do not move or lift this product with the baby inside it.
-  **WARNING:** Always use the restraint system.
-  **WARNING:** Never leave the child unattended.
-  **WARNING:** Do not use this product once your child can sit up unaided or weighs more than 9kg.
-  **WARNING:** The weight of the child using this product must not exceed 15kg.
-  **WARNING:** It is forbidden to lift or move the swing with a toy bar.
-  **WARNING:** Do not lift or move the product while the child is in it.
-  **WARNING:** It is strictly forbidden to place objects on the toy bar other than the matching toys.
-  **WARNING:** This product is not to be used in high places (e.g., countertops, tables, stairs, or other high places off the ground) to prevent falling hazards.
-  **WARNING:** Never use this product on an elevated surface (e.g. a table).
-  **WARNING:** Choking hazard: Do not use on soft objects (e.g. beds, sofas, etc.) to prevent choking when knocked over.
-  **WARNING:** Do not use on babies who can sit up alone. To prevent falling by the seat belt entanglement or strangulation and other hidden accidents.

-  **WARNING:** Do not let children play with this product.
-  **WARNING:** Make sure that the child leaves the product before opening or folding it.
-  **WARNING:** Never let the child sleep in this product. This product does not replace a cot or a crib. Should the child fall asleep, then it should be placed in a suitable cot or crib.
-  **WARNING:** When this product is connected to a music player, make sure the volume of the player is set to the base position.
-  **WARNING:** Do not use this product if any parts are damaged or missing. Do not use replacements unless they have been reviewed by the manufacturer.
-  **WARNING:** Keep away from fire.
-  **WARNING:** Make sure you use the safety system configuration when using.
-  **WARNING:** Non-rechargeable batteries are not to be recharged.
-  **WARNING:** Rechargeable batteries should only be charged under adult supervision.
-  **WARNING:** Rechargeable batteries should be removed from the product before charging.
-  **WARNING:** Different types of batteries or old and new batteries should not be mixed.
-  **WARNING:** The adapter used with the infant swing should be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
-  **WARNING:** The infant swing shall only be used with the recommended adapter.
-  **WARNING:** Batteries should be placed in the correct polarity.
-  **WARNING:** Exhausted batteries should be removed from the product.
-  **WARNING:** Power terminals should not be short-circuited.
-  **WARNING:** It is prohibited to power the product with an adapter other than the one provided with the product. The input voltage of the adapter is 110-240V/50-60Hz0.6A. Output voltage is 5-6V $\leq$ 1000mA.
-  **WARNING:** When using the adapter, keep the adapter away from children.

 **WARNING:** The adapter used in the swing should be checked regularly for safety jacks, accessories and other parts, and stop using it if there is any damage.

Warranty

- All our products are made from the finest quality materials and are manufactured under the strictest quality controls.
- We guarantee all our products or parts thereof, for a period of one (1) year from the date of purchase against manufacturing defects.
- For warranty purposes we will require proof of purchase. We recommend that the receipt for your product is kept in a safe place.
- This in no way affects your statutory rights.
- For any claim related with the warranty of this product we suggest to contact your retailer who will advise you how to proceed.



 amanababy.com

hello@amanababy.com

Imported by Millsons of London Ltd. EC1V 2NX

Made in China